


INSTALLATION INSTRUCTIONS FOR VAN HOOL C MODEL

BEFORE STARTING PROCEDURE TURN OFF BATTERIES AND READ ALL INSTRUCTIONS BEFORE STARTING PROCEDURE.



START BY REMOVING TRIM MOLDING ON BOTH THE LEFT AND RIGHT SIDE TAIL LIGHT PANELS TO EXPOSE RIVETS

NEXT REMOVE ALL MOUNTING HARDWARE FROM INSIDE OF PANELS

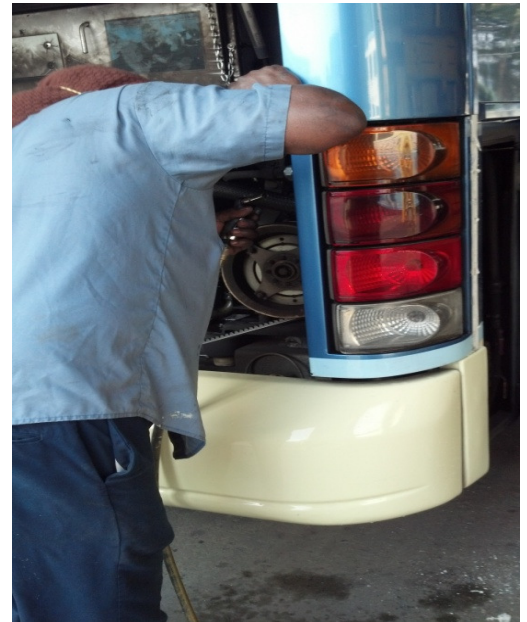

THEN REMOVE LIGHT ASSEMBLY



NEXT REMOVE ENTIRE PANEL ASSEMBLY. CLEAN POST OF SILICONE FROM WHERE TRIM MOLDING WAS REMOVED FROM

THEN INSTALL PANEL IN PLACE CHECKING FOR FIT AND FINISH. THE PANEL WILL BE HELD ON BY PLACING RIVETS ON THE INSIDE OF THE ENGINE DOOR FLANGE FACING INWARD, AND ALSO ON THE SIDE WHERE ORIGINAL RIVETS WERE REMOVED.

APPLY THE 221 SIKA (INCLUDED IN KIT) OVER RIVETS ON THE SIDE OF THE PANEL. THE SIKA IS USED TO HOLD NEW TRIM MOLDING PIECE ON (INCLUDED IN KIT)

WIRE UP LIGHT PIGTAILS
RED = MAJOR
BLACK = MINOR
WHITE = GROUND

INSTALL RUBBER GROMMETS AND LIGHTS.
TEST OPERATION OF ALL LIGHTS FOR PROPER OPERATION

